

ACCESSORIES COMPATIBILITY GUIDE

MODEL	Filter Adapter				Diffuser Tip			Traffic Wand			Battery				Remote Switch		Rail Mount		Bike Mount	MODEL		
	AOF				AOD			AOT			ARB				AER		ALG		ALB			
	S	S+	M	L	S	M	L	S	M	L	L14	L14/USBL16	L2	L18	L18/USBL4	01/02	03	01	00	10		
TK-SERIES																					TK-SERIES	
TK75 2018																					TK75 2018	
TK72R																					TK72R	
TK65R																					TK65R	
TK47																					TK47	
TK47UE																					TK47UE	
TK35 2018																					TK35 2018	
TK35UE 2018																					TK35UE 2018	
TK32																					TK32	
TK25IR	✓	✓									✓	✓	✓	✓						✓	✓	
TK25R&B	✓	✓									✓	✓	✓	✓							✓	✓
TK25Red	✓	✓									✓	✓	✓	✓							✓	✓
TK20R		✓									✓	✓	✓	✓							✓	✓
TK16		✓									✓	✓	✓	✓							✓	✓
TK15UE		✓									✓	✓	✓	✓							✓	✓
TK09		✓									✓	✓	✓	✓							✓	✓
PD-SERIES																					PD-SERIES	
PD40R		✓										✓	✓	✓	✓						✓	✓
PD35 TAC		✓									✓	✓	✓	✓							✓	✓
PD35 V2.0		✓									✓	✓	✓	✓							✓	✓
PD32																					PD32	
PD25																					PD25	
LD-SERIES																					LD-SERIES	
LD75C																					LD75C	
LD41			✓								✓	✓	✓	✓							✓	✓
LD22		✓									✓	✓	✓	✓							✓	✓
LD12	✓	✓									✓	✓	✓	✓							✓	✓
LD09																					LD09	
LD02																					LD02	
E-SERIES																					E-SERIES	
E35UE											✓	✓	✓	✓							✓	✓
E25UE		✓									✓	✓	✓	✓							✓	✓
E20		✓									✓	✓	✓	✓							✓	✓
E15																					E15	
E12																					E12	
E05																					E05	
E01																					E01	
MC-SERIES																					MC-SERIES	
MC11																					MC11	
FD-SERIES																					FD-SERIES	
FD65																					FD65	
FD45																					FD45	
FD41			✓								✓	✓	✓	✓						✓	✓	
FD30		✓									✓	✓	✓	✓							✓	✓
FD20		✓									✓	✓	✓	✓							✓	✓
RC-SERIES																					RC-SERIES	
RC40																					RC40	

MODEL	Filter Adapter				Diffuser Tip			Traffic Wand			Battery				Remote Switch		Rail Mount		Bike Mount	MODEL			
	AOF				AOD			AOT			ARB				AER		ALG		ALB				
	S	S+	M	L	S	M	L	S	M	L	L14	L14/USB	L16	L2	L18	L18/USB	L4	01/02	03	01	00	10	
RC20																							RC20
RC11	✓										✓	✓	✓	✓							✓	✓	
RC09																							RC09
RC05																							RC05
UC52																							UC52
UC35	✓	✓									✓	✓	✓	✓				✓			✓	✓	
UC30	✓	✓									✓	✓	✓	✓				✓			✓	✓	
UC09																							UC09
UC02																							UC02
UC02SS																							UC02SS
UC01																							UC01
SD-SERIES																							SD-SERIES
SD20																							SD20
SD11																							SD11
SE-SERIES																							SE-SERIES
SE10																							SE10
HP-SERIES																							HP-SERIES
HP30R																							HP30R
HP25R																							HP25R
HP15UE																							HP15UE
HM-SERIES																							HM-SERIES
HM50R																							HM50R
HL60R																							HL60R
HL55																							HL55
HL23																							HL23
HL-SERIES																							HL-SERIES
HL40R																							HL40R
HL32R																							HL32R
HL30 2018																							HL30 2018
HL26R																							HL26R
HL16																							HL16
HL15																							HL15
HL12R																							HL12R
HL10																							HL10
BIKE LIGHT																							BIKE LIGHT
BC30R																							BC30R
BC30																							BC30
BT30R																							BT30R
BC21R																							BC21R
CAMP LANTERN																							CAMP LANTERN
CL30R																							CL30R
CL25R																							CL25R
CL20R																							CL20R
CL09																							CL09
CL05																							CL05
CP30R																							CP30R

NOTE:
* Only for ON/OFF operation.
** Press down the anode side when taking out the battery in case the battery's anode stuck in the battery holder.